

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

## MODEL: T104M 24 HOUR DIAL TIME SWITCH MECHANISM

DOUBLE POLE SINGLE THROW (DPST)  
40 AMP, RESISTIVE EACH POLE 120-480 VOLT AC;  
40 AMP, INDUCTIVE OR TUNGSTEN OR 1000 VA  
PILOT DUTY EACH POLE 120V-277V AC;  
2 HP (24 FLA)-120V AC; 5 HP (28 FLA)-240V AC.



**WIRING INSTRUCTIONS:** To wire switch follow diagram above. Use solid or stranded COPPER only wire with insulation to suit installation. See gauge selection table for normal service applications. To make power connections remove 1/2 inch of insulation from wire ends. Insert bare ends of wire under the pressure plate of terminals. Use 3/16 or larger screwdriver to tighten terminal screws firmly. (25 lb-in minimum).  
**REPLACE INSULATOR BEFORE TURNING ON ELECTRICITY.**

TERMINAL	WIRE GAUGE	WIRE TYPE	INSULATION	TERMINAL	WIRE GAUGE	WIRE TYPE	INSULATION
1	12	18	60	2	12	18	60
3	12	18	60	4	12	18	60
5	8	28	75	6	8	28	75

**PROGRAMMING INSTRUCTIONS**  
1. TO SET "ON" AND "OFF" TIMES: Hold trippers against edge of CLOCK-DIAL, pointing to time (AM or PM) when ON and OFF operations are desired, tighten tripper screws firmly. For additional tripper pairs on CLOCK-DIAL, order 156T1925A.  
2. TO SET TIME-OF-DAY: Pull CLOCK-DIAL outward. Turn in either direction and align the exact time-of-day on the CLOCK-DIAL (the time now, when switch is being put into operation) to the pointer. DO NOT MOVE POINTER.

**OPERATING INSTRUCTIONS**  
• TO OPERATE SWITCH MANUALLY: Move MANUAL LEVER below CLOCK-DIAL left or right as indicated by arrows. This will not affect next operation.  
• IN CASE OF POWER FAILURE, reset CLOCK-DIAL to proper time-of-day. See programming instructions.

INTERMATIC INCORPORATED  
SPRING GROVE, ILLINOIS 60081-9698

156T510774

[Download PDF version of :](#)  
[Intermatic T104m User Guide](#)